Register and Save!



Save Over \$50!

Register at waterpik.com/registration to receive exclusive discount code.

Canadian customers please register at waterpik.ca/registration

We'd love to hear from you!













www.waterpik.com

Call: 1-800-525-2774 (USA) Call: 1-888-226-3042 (CAN) www.waterpik.ca

Offer includes

50% off

your next order

of assorted

tips + tip

storage case.

Waterpik® Water Flossing App







Register and Save

Register your product at waterpik.com/registration to receive over \$50 in savings. Canadian customers please register at waterpik.ca/registration.

Write a Review

Creating innovative Waterpik® products that inspire better oral health is our passion. We invite you to *leave a review by sharing your thoughts on Waterpik® ION on waterpik.com or the retailer's website.

*US customers only

We're Here to Help

We hope you are loving your new Water Flosser. If for any reason you are not satisfied or have any product questions, please contact our fast and friendly Customer Service Team based in Fort Collins, Colorado.

Waterpik® ION Water Flosser is backed by a 3-year manufacturer's warranty.

Call: 1-800-525-2774 (USA) 1-888-226-3042 (CAN) Monday-Friday 7 am-5 pm MST



Chat or F-mail service@waterpik.com







Quick Start Guide

GETTING STARTED


Connect the charging cable to a user supplied **USB charger. Plug the charger into the wall outlet, then connect the other end of the charging cable to the unit and charge for approximately 5 hours.

Ensure contacts on BOTH the cable and the unit are clean and dry before connecting the charging cable to the unit.

Remove the reservoir and fill with water. Replace reservoir and press down firmly.

Insert tip into the Water Flosser handle, pressing down firmly until it clicks into place.

**USB charger requirements: USB Type-A, Rated Output: 5.0 VDC, 1.0 A.

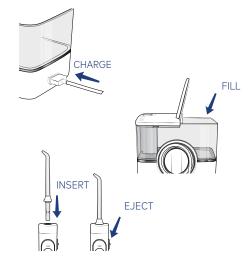


PRIMING UNIT (FIRST TIME USE ONLY)

Set pressure control on base to high (pressure setting No.10), point the handle and tip into sink. Turn power and water ON until water flows from the tip. Turn both power and water OFF



3 ADJUSTING THE PRESSURE SETTING

Turn the pressure control on the base of the unit to the lowest setting (pressure setting No.1) for first-time use. Gradually increase pressure over time to the setting you prefer – or as instructed by your dental professional.

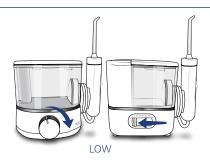

4 USING THE WATER FLOSSER

With unit OFF, place tip in mouth. Start on LOW pressure. Turn power ON and water ON. Adjust pressure to your liking.

Lean over sink. Close lips enough to prevent splashing.

TIP: TO AVOID MESS KEEP TIP IN MOUTH WHILE UNIT IS ON.

Aim water at the gumline at a 90 degree angle. Follow the gumline and pause briefly between teeth.



NEED HELP?

Visit waterpik.com/WelcomeWF

To watch a How To Video and find additional product support.

Call Us! 1-800-525-2774

Canadian customers please visit www.waterpik.ca for more information.